EZ PEEL WATER PROOF PAPER

TRANSFER INSTRUCTIONS

Print Optimizer settings:

1) Under Layer Profile – Remove the checkmark next to white to turn white toner off and check **"no mirror"**.

Please note – if you are working under a queue that is programmed to mirror designs when importing, this radio button will NOT override it, it will need to be unchecked on the main screen (see below).
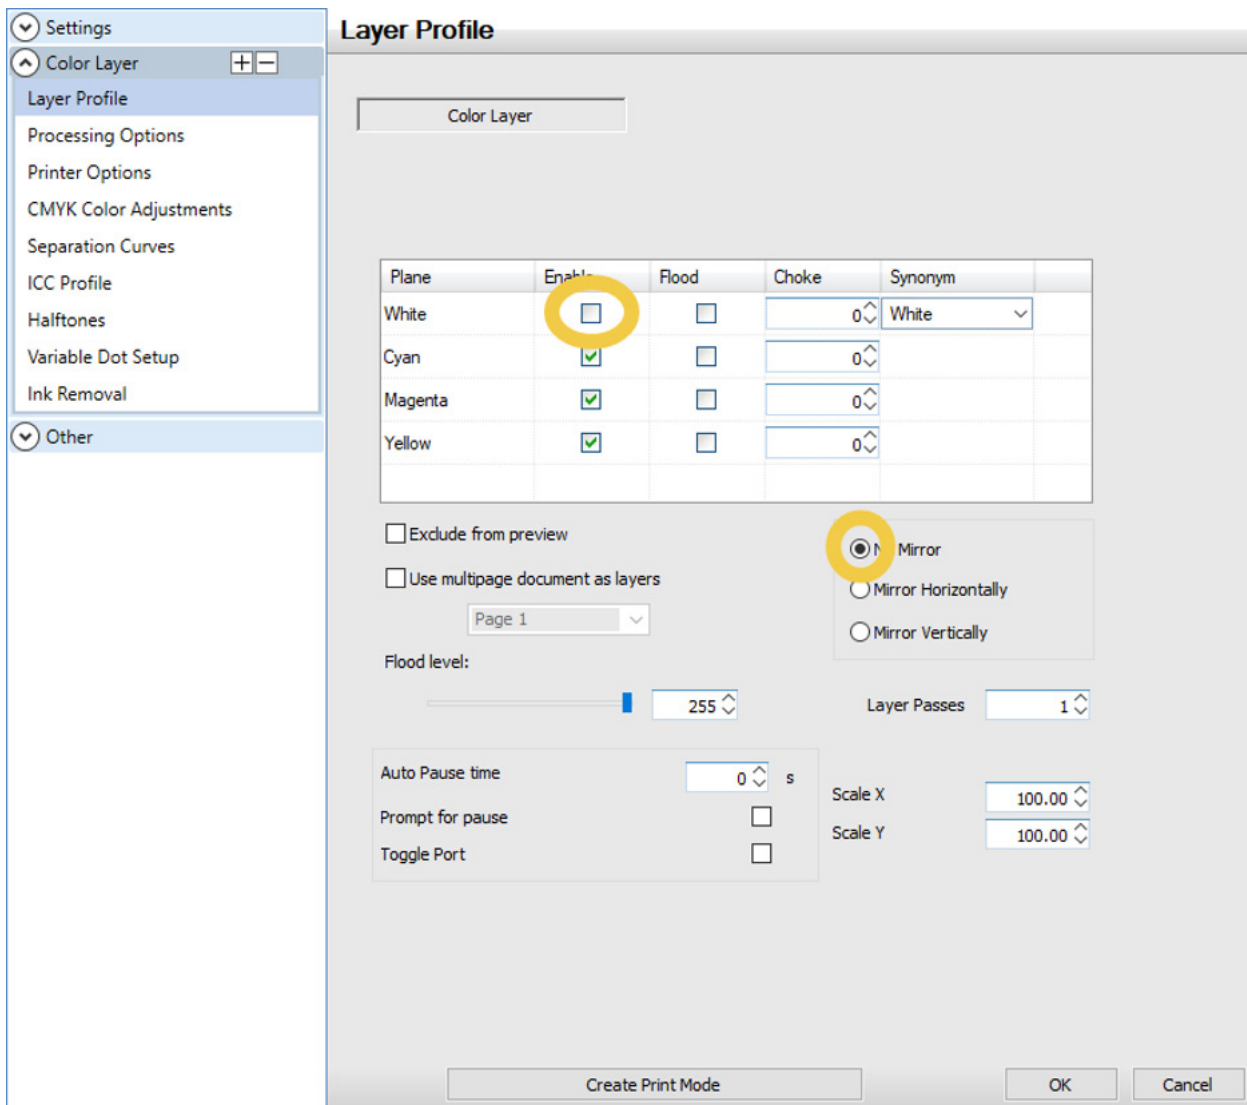
2) Under Printer Options – Set Media Type to **Cardstock** and Media Weight to **Ultra Heavy 4**
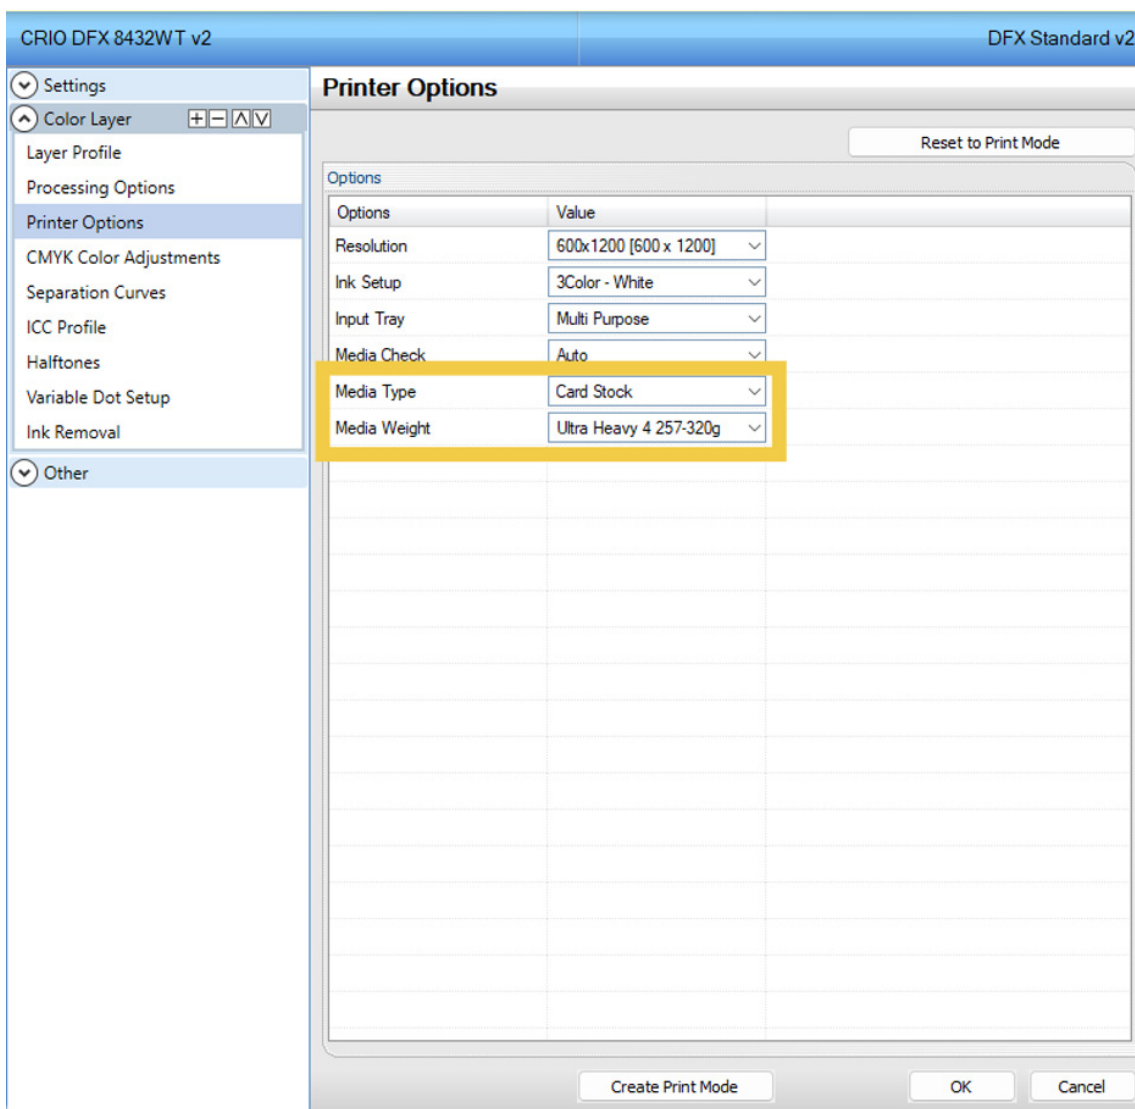
3) Per step number 1, double check the bottom right-hand corner of your screen to make sure the **mirror function is disabled**.
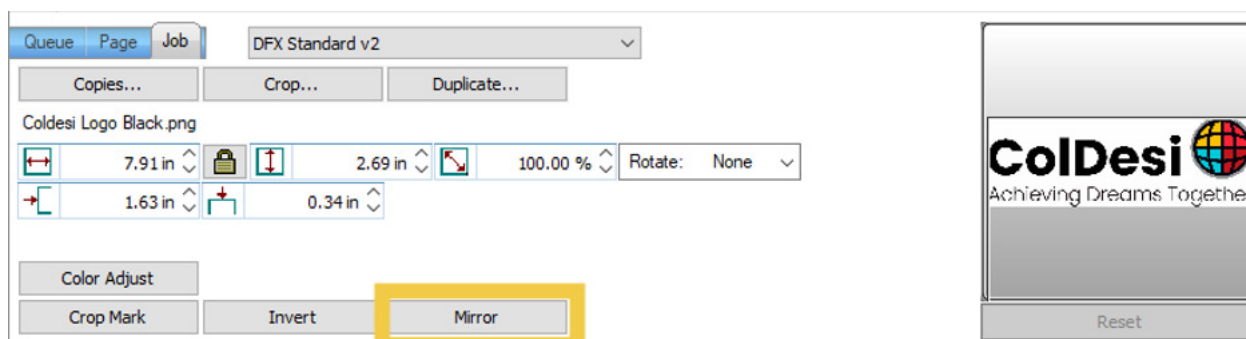
4) Install paper in the **multi-purpose tray** and **print**

For additional support, please contact support@coldesi.com or open a ticket at https://support.coldesi.com/open-a-ticket/.